

ON / OFF

Searching GPS :



- 1s → ● : 0 satellite
- 1s → ●● : < 4 satellites
- 1s → ●●●● : > 4 satellites
- No blink : GPS fix OK

ON : click
OFF : ⌘ 2 sec.


Low battery :




10s → ●

Installation

GPS antenna :

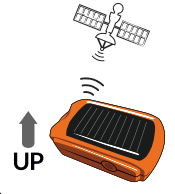

UP

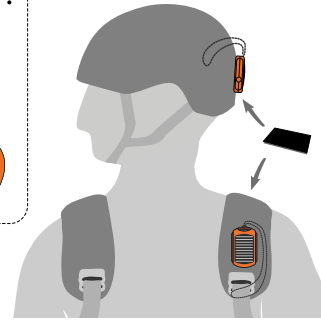


A B C/D

2x


↑ Up sensitivity selection

 ON



⌘ 4 sec.

 OFF




⌘ 2 sec.




- Ⓢ) "+10cm/s"
- Ⓢ) "+20cm/s"
- Ⓢ) "+30cm/s"
- Ⓢ) "+40cm/s"
- Ⓢ) "..."

Volume & LED

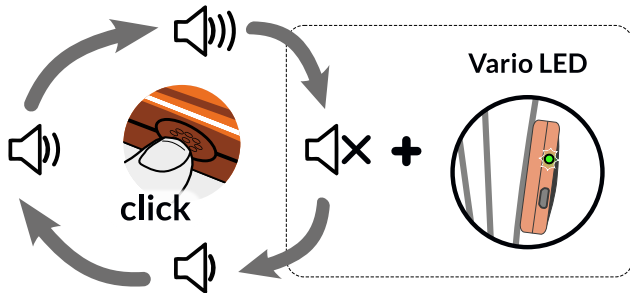

LED settings adjustable in the Configurator

↻ Weak lift buzzer

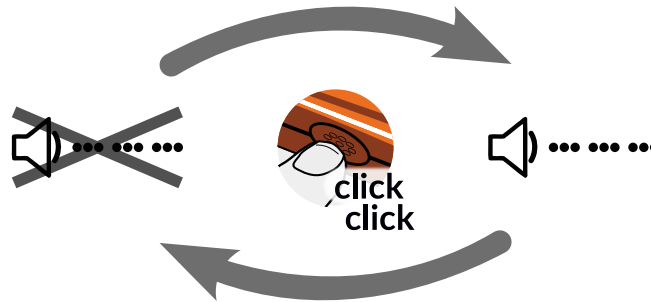

↓ Sink alarm selection

OFF



⌘ 4 sec.

ON




⌘ 2 sec.



- Ⓢ) "alarm off"
- Ⓢ) "-1.0m/s"
- Ⓢ) "-1.5m/s"
- Ⓢ) "-2.0m/s"
- Ⓢ) "..."

Voice : Manual mode

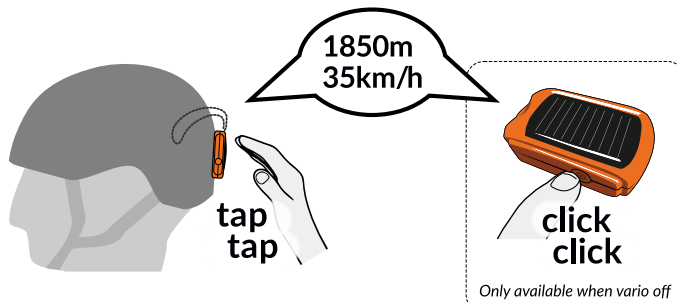


Vocal information adjustable in the Configurator

Voice : Auto mode

Auto mode : OFF



Auto mode : ON

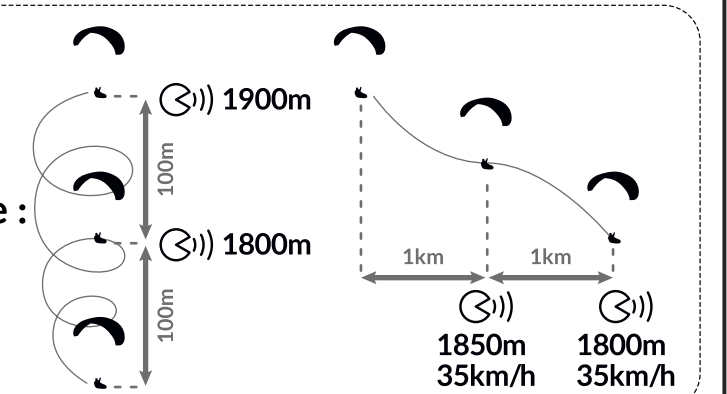

Trigger values and vocal information adjustable in the Configurator