
 


Installation

GPS antenna :

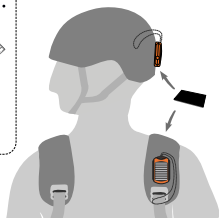


A B C/D




(2x)

↑ Up sensitivity selection

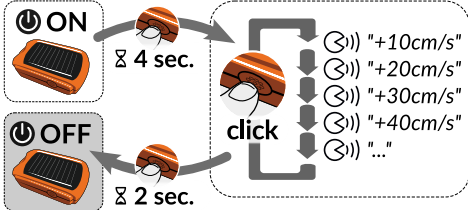

ON / OFF

 

ON : click
OFF : ⌘ 2 sec.

Searching GPS* :




- 1s ○ : 0 satellite
- 1s ○● : 1 satellite
- 1s ○●● : 2 satellites
- No blink : GPS fix OK

*Up to 5min in wide open area (not indoor)


Low battery : ○ → 10s

↻ Weak lift buzzer

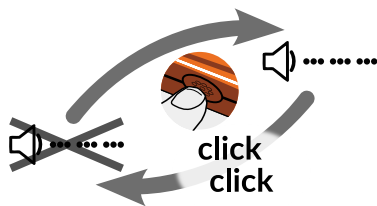


Default parameter is : OFF

↓ Sink alarm selection

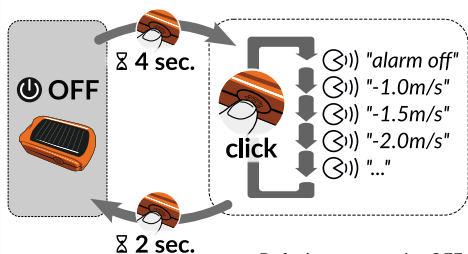


Volume & LED

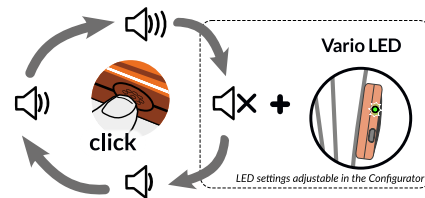


Default parameter is : volume medium, LED OFF

Voice : Auto mode

Auto mode :
OFF

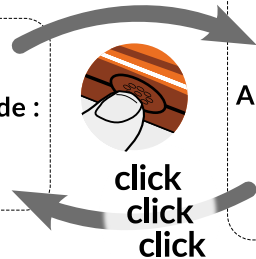


Auto mode :
ON

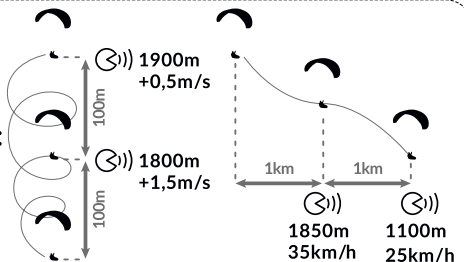

Default parameter is : Auto-mode OFF - altitude, speed, flight duration

Voice : Manual mode

While flying :

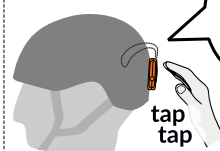

Vocal information adjustable in the Configurator

While hiking :



Only available when vario off

Default parameter is : altitude, speed, climb rate